

USER MANUAL CANOPY RANGE HOODS - SLIM LINE ACS60AX-L, ACS90AX-L, ACT60AX-L & ACT90AX-L

IMPORTANT // Please ensure that you read through this manual prior to installation and use. This user manual contains important information to ensure optimal performance and keep you safe. Please retain your proof of purchase, as this will be needed in the event that you require a warranty service. Remember to keep this user manual for future reference.



CONTENTS


Contents	2
Warning & Safety Instructions	3
Product Overview	4
Electrical Connection	6
Installation	7
Operating Instructions	8
Maintaning your Rangehood	9
Proof of Purchase	10
Notes	11
Contact Details	12


WARNING & SAFETY INFORMATION

- This appliance is intended for indoor domestic use only. It is not suitable for outdoor kitchens. This appliance complies with all of the relevant local and national standards. Inappropriate use can lead to personal injury and cause damage to property.
- To avoid risk of injury or damage please read these instructions carefully before installing and operating this appliance.
- It is important to keep these instructions in a safe place for future reference and to ensure that all users are familiar with the operations and safety precautions with this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or a lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- Please be aware that the halogen lamps may get very hot during use and the may retain their heat for some time after the unit is switched off.
- There should be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels.


- IMPORTANT // Read the information provided about cleaning of your appliance, methods and frequency.
- There is a fire risk if the cleaning procedures are not adhered to.
- Do not flambé under the rangehood.
- Exhaust air must not be discharged into an existing flue which is used for exhausting fumes from the appliance burning gas or other fuels.
- The minimum distance between the hob surface and the lowest part of the rangehood is 600mm. This distance shall be at least 650mm, if the rangehood is installed over a gas hob. If the instructions for the hob specify a greater distance this must taken into account.
- Due attention should be given to ensure that any applicable regulations concerning the discharge of the exhaust are adhered to.
- If the supply cord of this appliance is damaged, it must only be replaced by the manufacturer or it's service agent or a similarly qualified person in order to avoid a hazard.

PRODUCT **OVERVIEW**

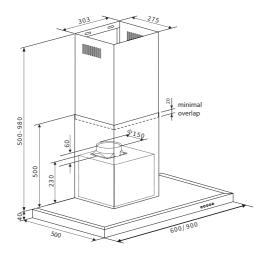

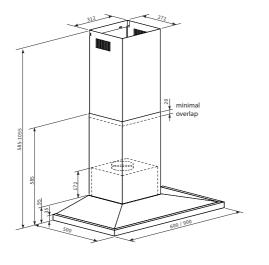


PUSH BUTTON CONTROLS



- 1. On/off
- 2. Low speed
- 3. Medium speed
- 4. High speed
- 5. Light

ELECTRONIC CONTROLS



- 1. Low speed
- 2. Medium speed
- 3. High speed
- 4. Light

ELECTRICAL CONNECTION

NOTICE: This appliance must be connected only by a licensed electrician and installed in accordance with the manufacturers instructions.

- Installation, repairs and other work by unqualified persons could be dangerous, for which the manufacturer cannot be held liable.
- Ensure power is not supplied to the appliance until after installation or repair work has been carried out.
- Do not connect the appliance to the mains electricity supply by an extension lead. These do not guarantee the required safety of the appliance.
- The connection data is given on the data plate. This is visible when the grease filters have been removed. Ensure that this data matches the household mains supply.
- Connection of this appliance should be made via a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations and the On-Off switch should be easily accessible after the appliance has been built in.

- When switched off there must be an all-pole contact gap of 3 mm in the switch (including switch, fuses and relays according to EN 60335).
- If the switch is not accessible after installation (depending on country), an additional means of disconnection must be provided for all poles.
- For extra safety it is advisable to install a suitable residual current device (RCD). Contact a qualified electrician for advice.

IMPORTANT: This appliance is supplied for connection to a 230V~50Hz supply.

The wires in the mains lead are coloured in accordance with the following code:

Green/Yellow = Earth

Blue = Neutral

Brown = Live

WARNING: THIS APPLIANCE MUST BE

EARTHED

INSTALL ATION

Height of Wall Canopy

The chimney is telescopic and is designed for hood installations between 650 to 750 mm above the cooking surface.

Select the desired installation height of the wall canopy.

Any installation above 750 mm will compromise the extraction performance.

For optimal efficiency, use smooth-wall, solid galvanized or plastic ducting for reduced noise and increased airflow.

Flexible ducting should only be used as a last resort (ie in difficult installations) and if used, ensure that it is pulled tight.

The smoother, straighter and shorter the ducting the guieter and more efficient the wall canopy will perform.

Preparing the Wall Canopy for Installation

Please read all the instructions carefully before installing the wall canopy.

Remove the filters from the canopy to allow access to wall mounting holes.


To remove the filters, pull the relative catch, tilting it downwards until it disengages from the supports. Reverse these instructions when refitting the filters.

Prior to drilling any holes, check that the area behind the surface to be drilled is clear of any electrical cables or pipes etc.

Stainless Steel/Iridium is very easily damaged during installation if abraded or knocked by tools.

Whenever possible, protect the top of the cooktop with cardboard or the like to prevent damage on installation.

INSTALLATION

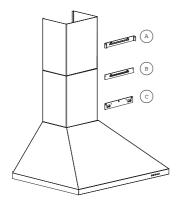

SLIM STANDARD & T-SHAPE CANOPIES

- Mounting to a stud is recommended. However if mounting to other wall types different fasteners will be required.
- Position the canopy mounting bracket (C) in the required position. Mark and drill the pilot holes. Screw the bracket to the wall, ensuring that the bracket is level as this will determine the final level of the rangehood.
- 3. Carefully position the rangehood body on the bracket.
- Position the flue cover mounting brackets (A-B) in the required position. Mark and drill the pilot holes. Screw the brackets to the wall.
- Attach the ducting to the rangehood and duct according to your requirements (external ducting or recirculating).
- 6. Install the flue covers and secure the top flue cover to the flue bracket with the provided screws.
- 7. Refit the filters and power the unit.

WARNING: Do not penetrate any screws into the rangehood as this may result in electrical hazards. Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

OPERATING INSTRUCTIONS

ELECTRONIC CONTROLS



TO TURN THE FAN ON

Press the required speed button once, the fan will turn on and run at the required speed. The light above the button will illuminate to indicate the selected speed.

TO TURN THE FAN OFF

Press the fan speed button beneath the illuminated light. The same button used to turn the fan on, will turn the fan off.

TO USE THE LIGHT

The light can be used by pressing the button above light symbol once. The light is switched off by pressing the same button again.

PUSH BUTTON CONTROLS

TO TURN THE FAN ON

Press the required speed button once, the fan will turn on and run at the required speed. The selected button will remain depressed to indicate that it has been selected.

TO TURN THE FAN OFF

Press the first button, the fan will then stop.

TO USE THE LIGHT

The light can be used by pressing the button above light symbol once. The light is switched off by pressing the same button again.

MAINTAINING YOUR RANGEHOOD

IMPORTANT: Switch off and unplug the rangehood at the powerpoint before undertaking any cleaning or maintenance on the unit.

LED LIGHT REPLACEMENT 220-240 Volts/2 Watts

The entire LED light assembly needs to be replaced (light board, metal case and lead) as one piece.

- Switch off the power to the canopy hood and remove the filter panles to get access to the interior of the unit.
- 2. Follow the LED lamp lead (approximately 30cm) from the back of the light case to find a white connector. Disconect the lead from the internal wiring of the range hood.
- 3. The metal LED light case is kept in place by two spring levers located at the back of the light case. Pushing the light case down from the interior of the unit will allow you to completely remove the lights.
- 4. Repeat these steps in reverse to install the replacement LED light.

GENERAL MAINTENANCE

To prevent any surface damage never use any abrasive products or products that contain soda, acids, chlorides or solvents.

To clean the surface of the appliance use a mild detergent in warm water, with a soft non-abrasive cloth.

Only use a damp cloth as use of excessive water can penetrate the unit and cause damage.Dry surface thoroughly after cleaning with a soft cloth to prevent marking of the surfaces.

FILTER MAINTENANCE

To ensure that the rangehood performs at it's best, filters need to be cleaned cleaned at least monthly or more frequently with heavy use

The filters can be cleaned using hot soapy water and a soft nylon brush or placed in a dishwasher.

NOTE: Cleaning the filters in the dishwasher may cause permanent discoloration of the surface. This does not in any way affect the performance of the filters.

Charcoal filters cannot be cleaned or reused. Replace filters every 3-6months dependent on use and cooking style. Please dispose of used filters responsibly.

NOTE: Oversaturated filters are a fire hazard so regular cleaning/replacement is a must.

PROOF OF PURCHASE

ATTACH YOUR PROOF OF PURCHASE FOR FUTURE REFERENCE

INSTALLATION

CONTACT DETAILS

AUSTRALIA

ARISIT PTY LIMITED 40-44 Mark Anthony Drive Dandenong South, VIC 3175 Australia Ph 1300 815 589 FX (03) 9768 0838 consumer.care@arisit.com

NEW ZEALAND

ARISIT PTY LIMITED
PO Box 68-140
Newton, Auckland
1145
New Zealand
Ph (09) 306 1020
FX (09) 302 0077
sales@aristonappliances.co.nz

