


# TCK30

## 30cm Ceramic Hob

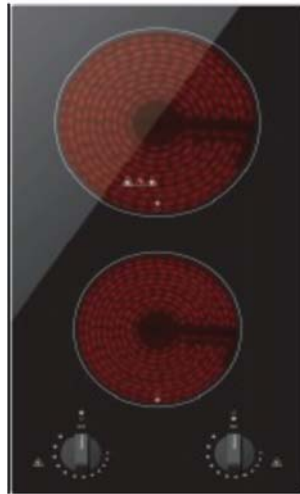

### 30cm Ceramic Hob


#### Features and Benefits:

<b>2 Ribbon Elements</b>	Ribbon elements create a more even heat than other types.
<b>Frameless Design</b>	Not only does it look good, but it's easier to clean without the usual steel lip on the edge of your hob trapping dirt and grime.
<b>Residual Heat Indicators</b>	As long as the element is hot this light will continue to glow. Less chance of burning yourself.
<b>Font Controls</b>	No reaching over the hot elements to control cooking. Makes it safer and easier.

#### Technical Specifications:

Cooking Zones	2
Controls	Black Knobs
Residual Heat Indicators	Y
Edge	Frameless
Cable Length	1.5M
Absorbed Power	3000W
Connection	220-240V / 50/60Hz / 15A
Dimensions (W) x (H) x (D)	288 x 60 x 520

ELEMENT CONFIGURATION	
Front	1200W
Rear	1800W

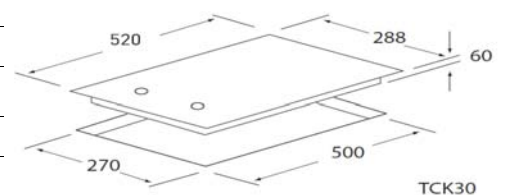

**Distributed by Arisit Pty Ltd**

40-44 Mark Anthony Drive, Dandenong South VIC 3175 Ph: 1300 762 219 Fax: 03 9768 0838 Website: [www.arisit.com](http://www.arisit.com)